PARABODY

Serious Steel

425/660 CABLE GUIDE STABILIZER KIT

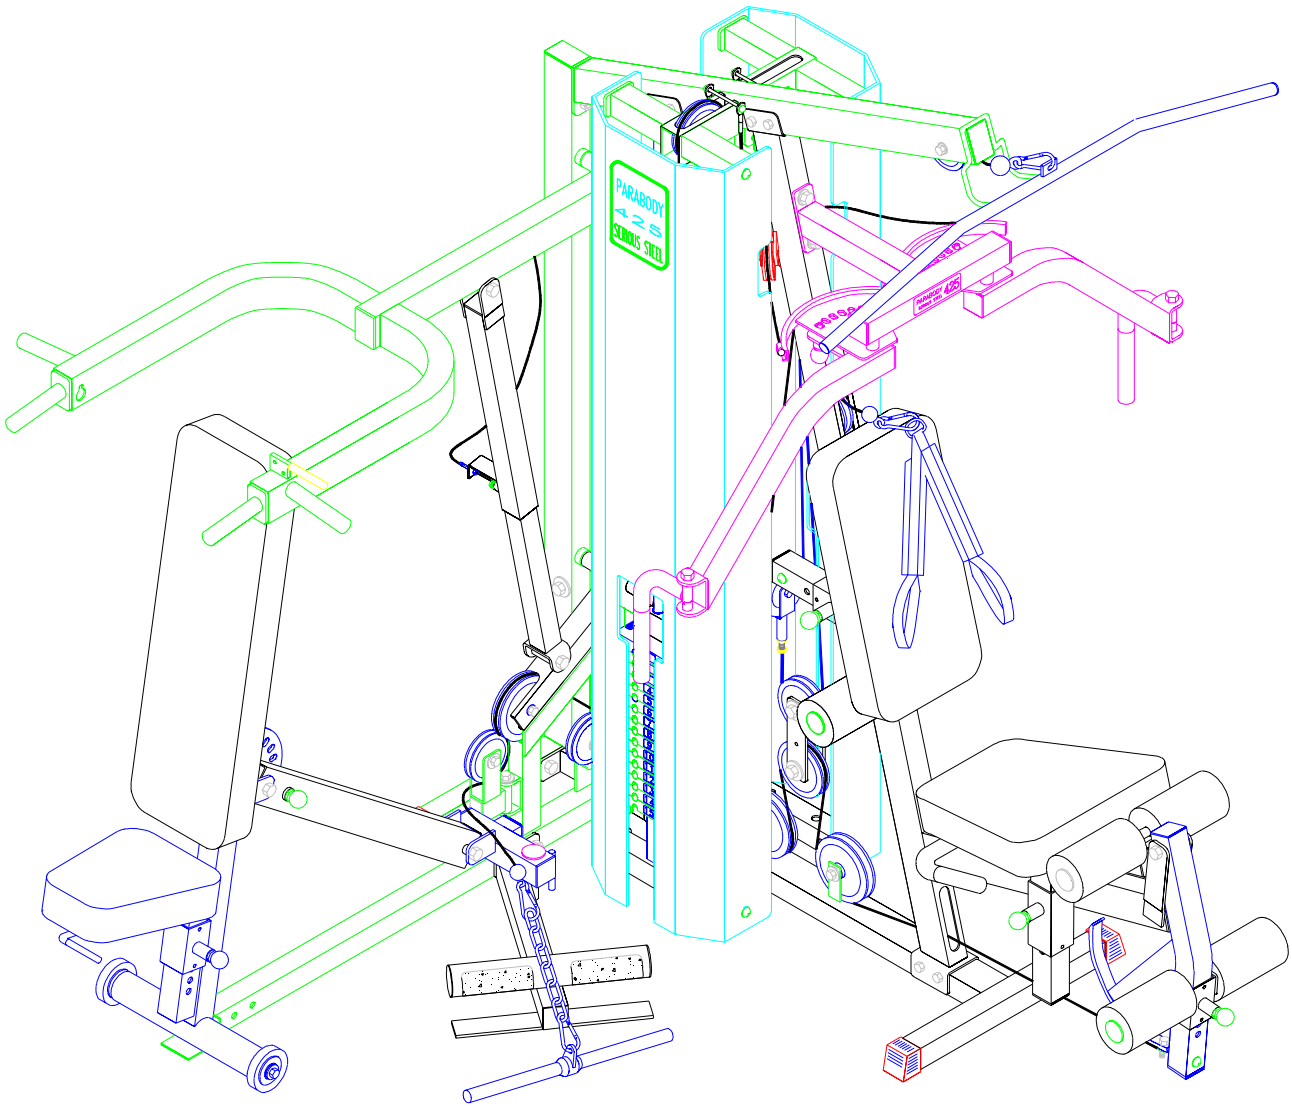

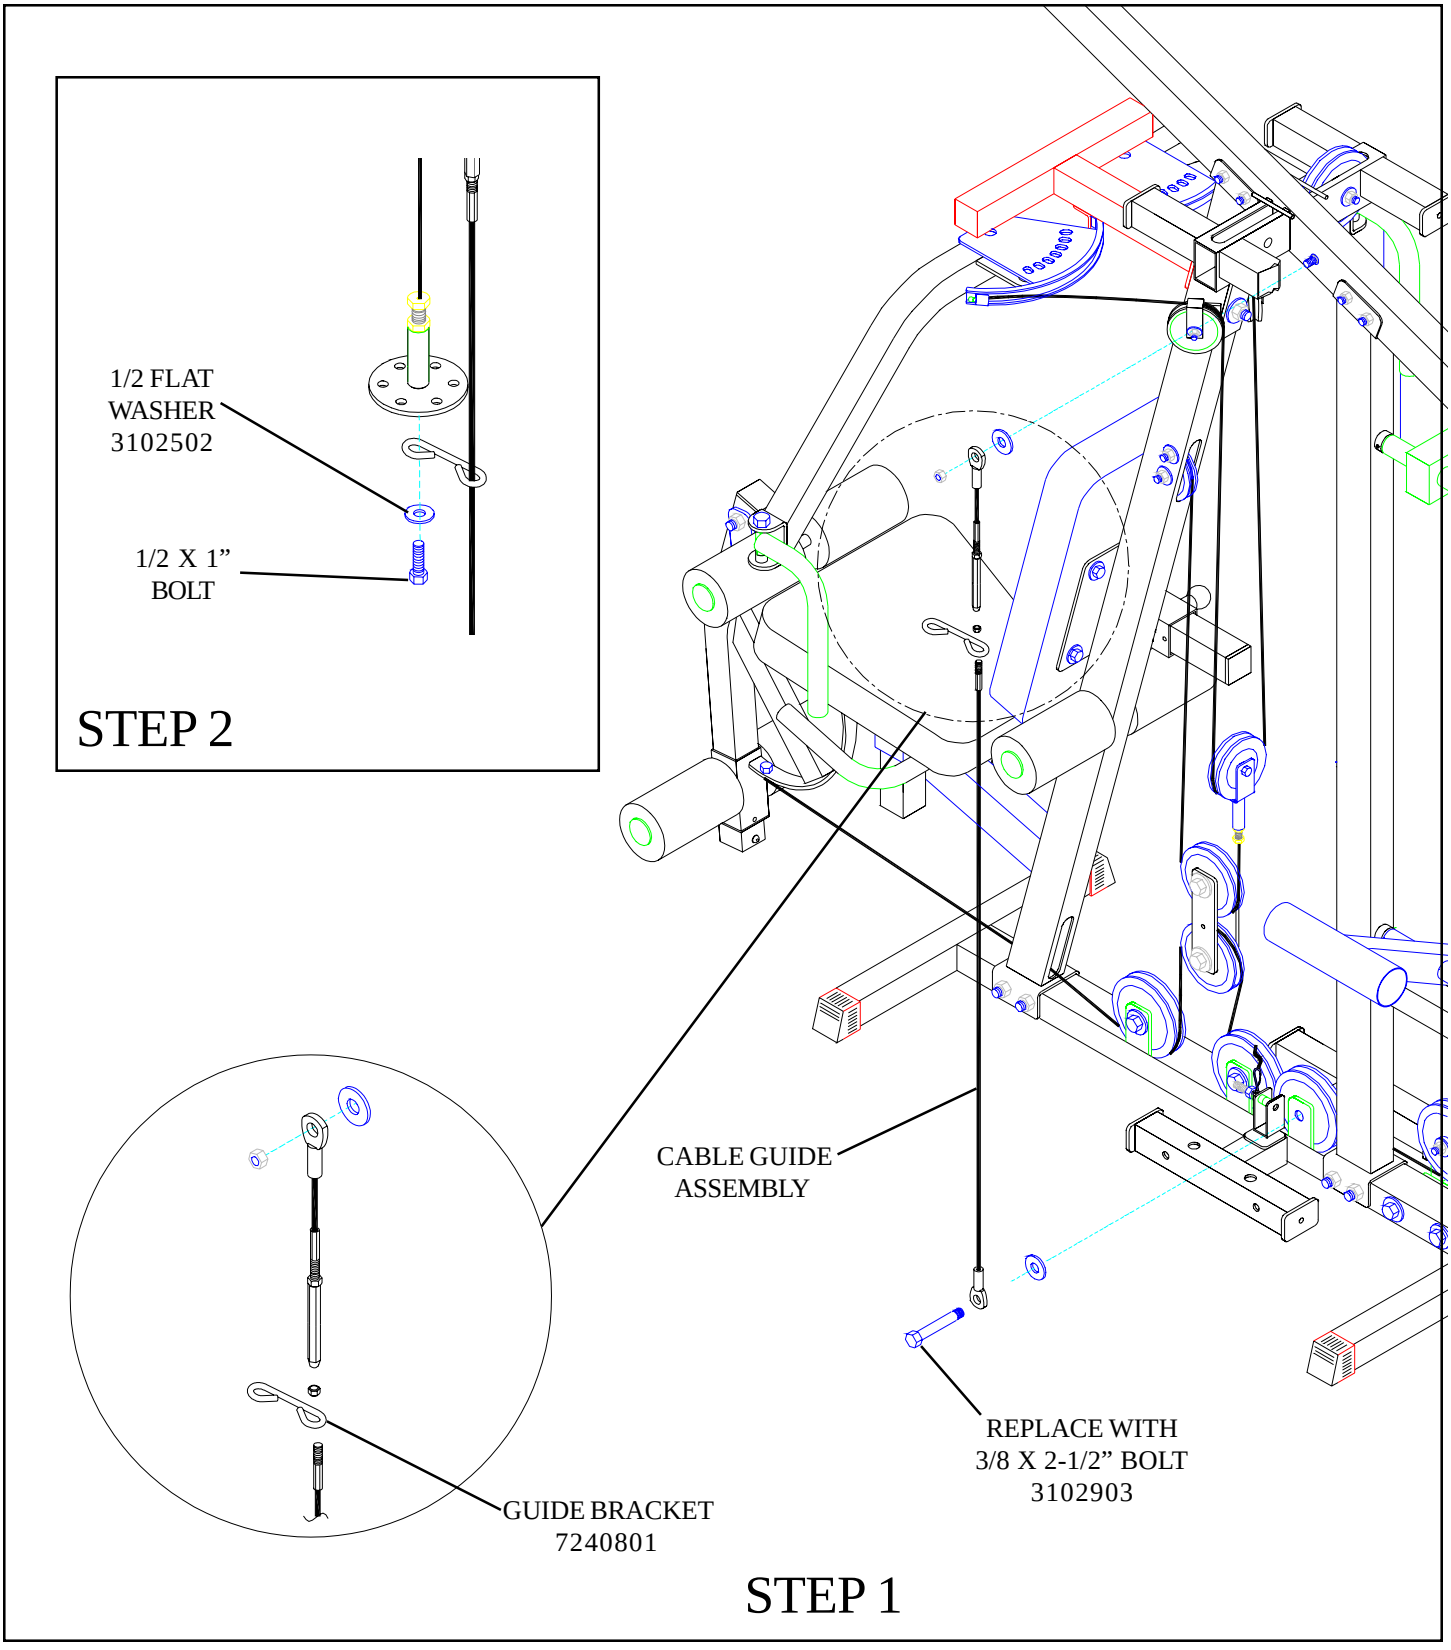

- Remove shroud and install cable assembly as shown with components included in kit. Secure all bolts and re-install shroud